



Seeburg  
Service **Select-o-matic** Bulletin


"TRIP-OFF" ADJUSTMENT

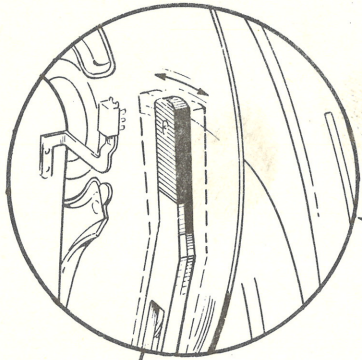

If the hole in a record is "off-center" it can cause the pickup to move in and out and trip before the record has finished playing. If you have records like this - -

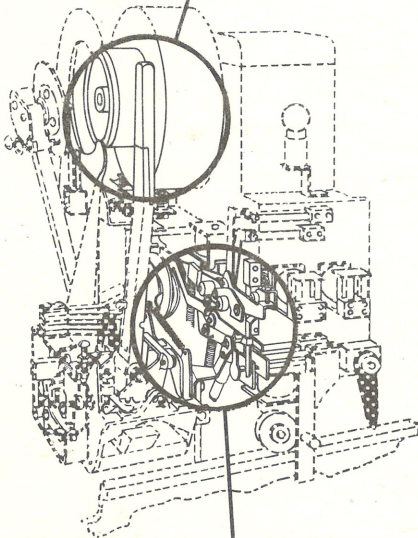

loosen these screws and move the "saw" up a little. The higher it is, the less effective - - all the way up, it is not in use and - -

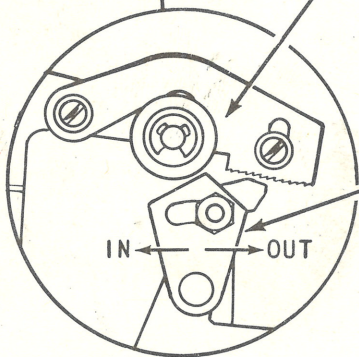

all trip action will work from the "shoe". Move shoe in for early trip - - out for later trip.